



TEXTSTYLE

FABRIC CLEANING

Any mild cleaning product should be tested on a small, inconspicuous area prior to broad application on the shade panel. Do not use cleaning methods involving heat, bleach, abrasives, or solvents. Use of these methods will void the warranty. A swatch sample of the fabric may also be obtained through Customer Service for testing purposes.

KLEENSCREEN | KLEENSCREEN BLACKOUT | 3000 NET | 4000 NET | 3000 HT | X-WEAVE | X-WEAVE ZERO | TEMPE BLACKOUT | VASSO BLACKOUT

Remove dust with a vacuum cleaner or compressed air. Clean with a sponge and warm soapy water using mild detergent. Rinse with clean water. Do not scrub. Do not use solvents or abrasives that could harm the coating of the fabric. Leave the blind down until completely dry. You may also very gently rub the fabric with a clean white pencil eraser to remove small stains.

HIGH PERFORMANCE: SILVERSCREEN | OMNIASCREEN | ENVIROSCREEN

Dust can be removed with a soft feather duster, cloth, or by vacuum that has a soft brush at the lowest setting. When deeper cleaning is needed, the colored side can be cleaned with a damp cloth. Avoid harsh cleansers and abrasives. Do not get metallized side wet.

AMBIENT RENEW | MESA COLLECTION

Remove dust with Vacuum cleaner or compressed air. Do not soak or completely immerse the fabric. Clean by gently wiping with a damp sponge. Do not scrub. Do not use solvents or abrasives. Leave the blind down until completely dry.

AMBIENT EDGE

Remove dust lightly by vacuum cleaner or gently wipe with dry cloth. Do not soak or completely immerse the fabric. Do not use any solvents or abrasives, and do not rub.